



Quick Jaw Hose End Valve

The Industries Highest Flowing Valve for Cylinder Filling and Bobtail delivery trucks



Quick Jaw Features:

- Minimum Loss Valve, .6CC at disconnect
- Safety Tab Prevents Lifting Collar When Valve open
- The operating handle can be moved to any position without cutting seat
- User friendly handle is large enough to operate with gloved hands
- Self latching handle with safety latch to prevent accidental opening
- Only 1/8 turn to connect or disconnect
- No additional adapters or connectors needed for operation



110519	L364	1 3/4" ACME X 3/4" FNPT
110518	AL363	1 3/4" ACME X 1" FNPT
110521	AL366	1 3/4" ACME X 1 1/4" FNPT

Easy Operation, Pull up on locking collar to open jaws. Place jaws on Fill Valve, release collar and tighten 1/8 turn and open valve to fill. Close valve, loosen collar 1/8 turn to bleed, pull up on the collar to release

Quick Jaw Hose End Valve

04/02/11

For your local distributor contact us:

10480 SHADY TRAIL LN.
SUITE 106
DALLAS, TEXAS 75220
PHONE (214) 357-4591



WEBSITE: www.squibbtaylor.com

P.O. BOX 541175
DALLAS, TEXAS 75354-1175
FAX (214) 357-5923