

# Installation Instruction for Two-way (Model A1802 / A1812), Three-Way (Model A1803 / A1813), Four-Way (Model A1806/ A1816), Five-Way (Model A1807/A1817) Splitters

MANUFACTURED BY PARKER - PGI DIVISION

March 2014

Form FVC 052 - Rev 06

**IMPORTANT: KEEP THIS DOCUMENT WITH THE PRODUCT UNTIL IT REACHES THE END USER.**


NOTE: MODELS A1804 AND A1805 EQUA-FLO MANIFOLDS ARE SHOWN. THESE INSTRUCTIONS ALSO APPLY TO THE MODEL 1801-1000 EQUA-FLO MANIFOLDS.

ALL 1" NPT HOSES SHOULD BE THE SAME LENGTH AND HAVE A SWEEPING RADIUS OUT OF THE SPLITTER AND INTO THE EQUA-FLO MANIFOLDS.

A SWEEPING RADIUS ON THE INLET HOSE MUST ENTER THE SPLITTER FROM THE TOP. SPLITTER MUST BE REASONABLY LEVEL WITH THE TOOL BAR.

NEVER REMOVE THE 6" INLET NIPPLE, AS THIS HELPS PROVIDE A UNIFORM LIQUID / VAPOR MIXTURE IN THE DIVIDING CHAMBER.

ALL MANIFOLDS MUST HAVE SAME SIZE RESTRICTOR. BACK-PRESSURE SHOULD BE APPROXIMATELY EQUAL IN MULTIPLE MANIFOLDS.

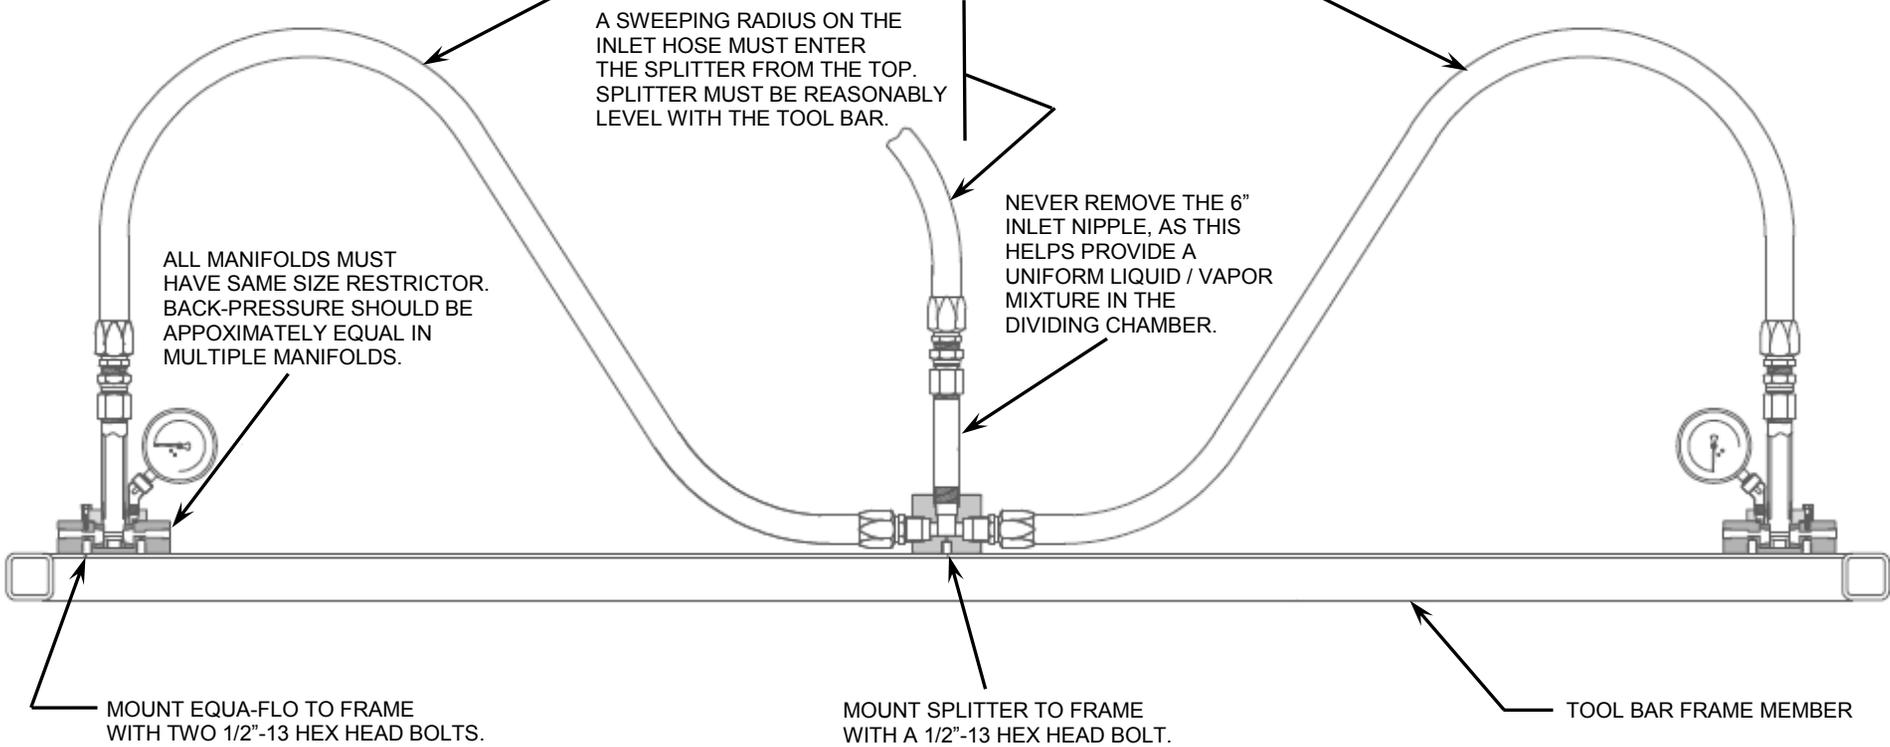

MOUNT EQUA-FLO TO FRAME WITH TWO 1/2"-13 HEX HEAD BOLTS.

MOUNT SPLITTER TO FRAME WITH A 1/2"-13 HEX HEAD BOLT.

TOOL BAR FRAME MEMBER

NOTE:  
 MODEL A1802/A1812 TWO-WAY SPLITTER IS SHOWN. MODEL A1803/A1813 THREE-WAY SPLITTER, MODEL A1806/A1816 FOUR-WAY SPLITTER OR MODEL A1807/A1817 FIVE-WAY SPLITTER WILL MOUNT IDENTICALLY AND EACH HOSE TO THE EQUA-FLO MANIFOLDS MUST BE THE SAME LENGTH.

*While this information is presented in good faith and believed to be accurate, Individuals using this literature must exercise their independent judgment in evaluating product selection and determining product appropriateness for their particular purpose, system requirements and certifications. The manufacturer reserves the right to change product designs and specifications without notice.*

## **USER SAFETY RESPONSIBILITY STATEMENT FOR ALL PARKER PRODUCTS**

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

- This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.
- The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

*While this information is presented in good faith and believed to be accurate, Individuals using this literature must exercise their independent judgment in evaluating product selection and determining product appropriateness for their particular purpose, system requirements and certifications. The manufacturer reserves the right to change product designs and specifications without notice.*