

FOR FLO-MAX SAFETY COUPLERS

September 2005

Form SB-FLO-MAXSS, Rev 03

WARNING

SuperShooter III WARNING BULLETIN


For those customers using the BLU-JET SuperShooter III mounting bracket with the FLO-MAX Safety Coupler, please be advised that a Hydrostat or a Bleed Valve, if installed in the wrong location, will interfere with the bracket during a disconnect.

The Body of the FLo-Max will move approximately ¼" toward the Spring during disconnect or reconnect, and this movement is the reason for the interference problem.

The following illustrations depict the proper installation locations for a 1/4" NPT Socket Head Pipe Plug, a Hydrostat, and a Bleed Valve.

A 1/4" NPT Bleed Valve must be installed at this location ONLY.

Install a 1/4" NPT Socket Head Pipe Plug, flush with the Coupler Body, in this location.

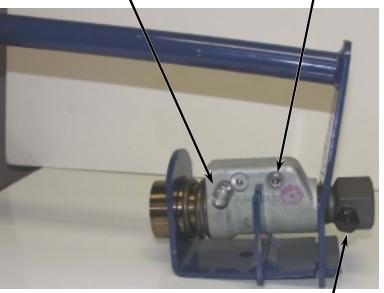

To mount a Hydrostat with this arrangement, install a Squibb-Taylor 2032-5000, 1-1/4" Adapter at the outlet of the FLO-MAX.

When installing a Hydrostat with a Bleed Plug, use a Nipple & Tee, as shown.

WARNING:

DO NOT USE THIS ARRANGEMENT WITH PGI/PIONEER STANDARD BRACKETS.

