

# Replacement of an Excess Flow Assembly for Models A520R, A521P, A522P, and A525P

(214) 357-4591 DALLAS TEXAS (800) 345-8105
MANUFACTURED BY PGI INTERNATIONAL

September 2012

Form FVC 094- Rev 01

## IMPORTANT: KEEP THIS DOCUMENT WITH THE PRODUCT UNTIL IT REACHES THE END USER.

### WARNING!

- Contact with or inhalation of liquid Anhydrous Ammonia (NH<sub>3</sub>) or NH<sub>3</sub> vapor can cause SERIOUS INJURY OR DEATH.
- 2. Before installation or removal of any tank valve, the system must be purged of all product and Personal Protective Equipment (PPE), safety gloves, goggles and clothing should be worn.
- 3. For proper handling of NH<sub>3</sub>, refer to ANSI Standard K61.1
- 4. An abundant supply of fresh water should be available to provide immediate first aid treatment for exposure to NH3.
- 5. The valve Seat should be inspected for cracking in NH<sub>3</sub> service at least once every 2 years and replaced as required.
- 6. Closure of the excess flow check in the valve will not totally stop the flow of NH<sub>3</sub> since the check disk has a small opening in it to allow the check disk to automatically reset.
- 7. The Excess flow safety device used in this product will close ONLY if the rated flow rate is achieved through the valve.
- 8. Downstream restrictions, partial breaks and/or low tank pressure can result in failure to achieve the excess flow rate and the excess flow check WILL NOT CLOSE.
- 9. Connecting two withdrawal valves to one tank will reduce the flow through each valve by approximately 50% thereby affecting the ability of the excess flow valves to close with multiple hose failures. Also, piping should not allow one withdrawal valve to "backfeed" the other. Appropriately located back checks must be installed.
- 10. The operation of the excess flow device should be tested before every season.

#### INSTALLATION / REMOVAL

### **WARNING!**

- To prevent unexpected pressure buildup in the system, always keep the Valve Handle in the OPEN POSITION during installation or removal.
- Before installation or after removal, check the Excess Flow Disk for free operation between FULLY CLOSED & FULLY OPEN.
- Make sure the Excess Flow Stem is not bent. Replace the Valve if it is bent.
- 4. Inspect the Valve Seat for hardening or cracking and replace if either is observed.

#### **OPERATION**

- 1. Open the Valve slowly to avoid the Excess Flow Check from closing. If it does, you will hear a "click" and flow will be slowed to a very small amount.
- 2. If the Excess Flow Disk is tripped, close the Valve. This will allow the Excess Flow Check to reset automatically, then you may try again to open the valve slowly.

#### TESTING THE EXCESS FLOW SHUT-OFF

- 1. Connect a test hose to the nurse tank. The test hose should be the same length and size as the normal hose used in the field and have a ball valve at the far end, followed by a bleeding system that can be submerged in water without restricting FULL OPEN flow.
  - NOTE: This test should be conducted at tank pressures representative of the lowest application tank pressure.
- 2. Close the ball valve, open the withdrawal valve, submerge the bleed system at least 12 inches deep in the water, crack open ball valve for 10 seconds to fill hose with liquid, shut ball valve, then quickly open the ball valve FULL OPEN.
- 3. After a brief burst of flow, the Excess Flow Device should close, then the flow should be reduced to a small amount. After flow has reduced close the withdrawal valve then the test hose may be bled down safely and removed from the withdrawal valve.

WARNING! If the excess flow did not close, then use a valve with a LOWER excess flow rate.

While this information is presented in good faith and believed to be accurate, Individuals using this literature must exercise their independent judgment in evaluating product selection and determining product appropriateness for their particular purpose, system requirements and certifications. The manufacturer reserves the right to change product designs and specifications without notice.

Form FVC 094-Rev 01 GEARS 41751 1 of 2

#### INSPECTION AND / OR REPLACEMENT OF THE EXCESS FLOW ASSEMBLY

- **Step 1:** Excess Flow Valves are a Safety Device which will Close in the event of a hose failure i.e., a pull away or accident which causes the hose to be Severed Completely. It is of utmost importance that these valves be Installed and Operated Properly in order to provide the Safety Protection they were designed to give.
  - a.) TO INSPECT: Place the palm of the hand against the hex head of Check Stem ① and depress Spring ② until Poppet Check ③ is at full stroke against the Yoke Seat ④. Release the Check Stem ①, and observe the spring return stroke. If the excess flow assembly does not move freely toward Yoke Seat ④ or exhibit a snap action on the spring return stroke, it must be replaced.

    Note: The complete excess flow valve assembly number is S1597-1145.
  - **b.)** TO REMOVE: Secure the valve body in a bench vise and using a pipe wrench rotate the Excess Flow Assembly counter clockwise (CCW) to remove from Valve Body.
  - c.) TO REPLACE: Clean the internal body threads with a wire brush or solvent and wipe or blow dry with air. Apply the loctite thread adhesive, part # TL 29005 provided with the Excess Flow Assembly kit to the Yoke and body threads. Install the new Excess Flow Assembly into the body and tighten with the pipe wrench.
- CAUTION: Do not allow loctite to contact the stem or check disc. Allow 30 minutes to dry and check operation of assembly per a.) above. Step 2: Before reassembly, clean and inspect the valve seat at. Clean all metal components with solvent and wipe or blow dry with air.

#### INSTALLATION OF NEW OR REPAIRED TANK VALVES

#### REFER TO FIGURE 1 FOR THE FOLLOWING STEPS:

Step 1: Holding the valve in hand, depress and release Check Stem 3 to insure that it is operating smoothly.

Step 2: Apply Teflon tape or sealant on 1-1/4" NPT Threads, and place handwheel in full open position.

**Step 3:** Install valve into threaded tank fitting and tighten to desired position, taking caution to not over tighten.


**CAUTION:** Do not damage Check Stem ② while installing valve.


#### SAFETY TIPS FOR SHUT-DOWN AND STORAGE

#### SAFETY TIPS FOR SHUT-DOWN AND STORAGE WHEN TANKS ARE NOT IN USE:

**Step 1:** Make sure all valves are closed with any exposed outlets / inlets capped to keep out debris a moisture, which will help to prevent condensation or corrosion of internal parts.

**Step 2:** Store tanks in accordance with federal, state, and local codes and manufacturer's instructions. Check periodically for leakage or excessive pressure build-up. Make corrections or repairs as necessary.



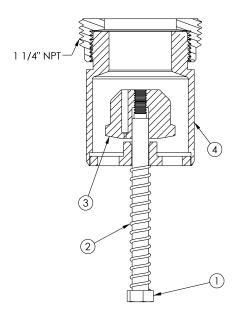

While this information is presented in good faith and believed to be accurate, Individuals using this literature must exercise their independent judgment in evaluating product selection and determining product appropriateness for their particular purpose, system requirements and certifications. The manufacturer reserves the right to change product designs and specifications without notice.

Form FVC 091-Rev 01 GEARS 41751 2 of 2